

PLEASE SPECIFY (IF NOT SPECIFIED AMICO  
WILL PROVIDE DEFAULTS LISTED BELOW):

STUD SIZE ( 3 5/8" TYP. ): TBC

STUD GAUGE ( #16 TYP. ): TBC

WALL THICKNESS ( 5/8" TYP. ): TBC

# RECESSED MAJESTIC SERIES HORIZONTAL HEADWALL SYSTEM SINGLE TIER (M/N: HW00-01T-P-RXXX)



Install  
Instructions

FOR PRESENTATION  
PURPOSES ONLY  
Sep-17-2025  
NOT FOR  
CONSTRUCTION USE

DRAWING # 00

TYPE:

PATIENT ROOM

QUANTITY:

00

IF MIRRORED UNITS ARE REQUIRED, THE  
CUSTOMER MUST INDICATE THE  
QUANTITY BELOW



QTY MIRRORED: \_\_\_\_\_

## SYSTEM DETAILS

| SYM | QTY | DESCRIPTION               |
|-----|-----|---------------------------|
| HC  | 2   | HORIZONTAL CHANNEL        |
| O   | 1   | AMICO GAS OUTLET, OXYGEN  |
| A   | 1   | AMICO GAS OUTLET, MED AIR |
| V   | 1   | AMICO GAS OUTLET, VACUUM  |
| E2  | 2   | RECEPTACLE - DUPLEX RED   |
| N2  | 2   | RECEPTACLE - DUPLEX IVORY |
| NC  | 1   | PROVISION - NURSE CALL 3G |
| DA  | 2   | PROVISION - DATA 1G       |

## IMPORTANT NOTES:

- MAINTAIN A MINIMUM SPACING OF 3" C/C BETWEEN LOW VOLTAGE DEVICES, POWER OUTLETS, AND SWITCHES.
- MAINTAIN A MINIMUM SPACING OF 5" C/C BETWEEN GAS OUTLETS.
- NURSE CALL DEVICES MUST MAINTAIN A MINIMUM SPACING OF 6" C/C FROM OTHER SERVICES DUE TO THE SIZE OF THE DEVICE FACE
- STUD SIZES AVAILABLE ON 2 1/2", 3 5/8", 4", 6" AND 8".
- BACK-TO-BACK UNITS REQUIRES 6" STUDS.
- FOR VERTICAL GRAIN DIRECTION LAMINATE, A LAMINATE DIVIDER IS REQUIRED EVERY 47.5" (C/C) OF LAMINATE LENGTH.
- DO NOT PLACE ANY SERVICES WITHIN 3" SPACING FROM THE LAMINATE DIVIDER.

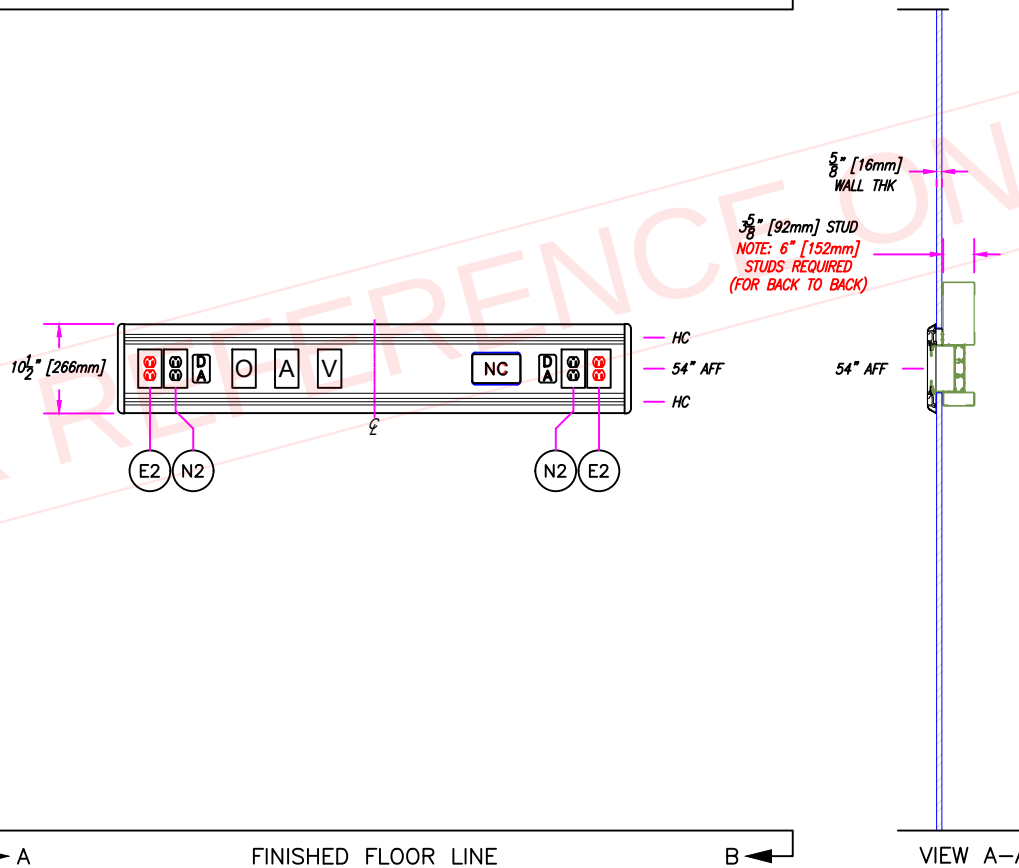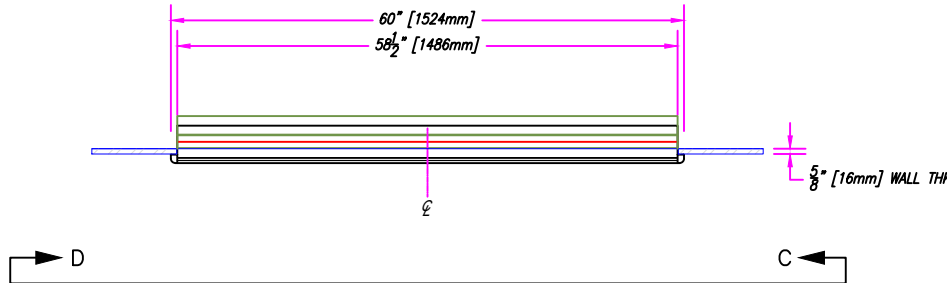

IMPORTANT: PLEASE VERIFY THAT THE ABOVE INFORMATION IS  
CORRECT, AND PROVIDE THE REMAINING DETAILS.

APPROVAL - PRINT AND SIGNATURE

DATE

PHONE NO.

|                        |          |             |               |                       |                                                                                                        |                                                                                                                                                               |                                                                                    |
|------------------------|----------|-------------|---------------|-----------------------|--------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| HOSPITAL               | HOSPITAL | NURSE CALL  | MFGR. : TBC   | MODEL No. : TBC       | <br>www.amico.com | 85 Fulton Way<br>Richmond Hill, Ontario<br>L4B 2N4, CANADA<br>Toll-Free: 1-877-462-6436(T)<br>1-866-440-4986(F)<br>Tel: (905) 764-0800<br>Fax: (905) 764-0862 | QUOTE No.<br><br>REV. BY: RJUSAYAN<br>PROJECT PM:<br>DATE: Sep-17-2025<br>REV. NO: |
| LOCATION               | LOCATION | GAS OUTLETS | MFGR. : AMICO | TYPE CONNECTION : TBC |                                                                                                        |                                                                                                                                                               |                                                                                    |
| UNIT AS SHOWN - N.T.S. |          | FINISH      | TBC           | CEILING HEIGHT        |                                                                                                        |                                                                                                                                                               |                                                                                    |
|                        |          |             |               |                       |                                                                                                        |                                                                                                                                                               |                                                                                    |

PLEASE SPECIFY (IF NOT SPECIFIED AMICO  
WILL PROVIDE DEFAULTS LISTED BELOW):

STUD SIZE (6" TYP.): TBC

STUD GAUGE (#16 TYP.): TBC

WALL THICKNESS (5/8" TYP.): TBC

# RECESSED MAJESTIC SERIES HORIZONTAL HEADWALL SYSTEM

SINGLE TIER (M/N: HW00-01T-P-RXXX)



Install  
Instructions

FOR PRESENTATION  
PURPOSES ONLY  
Sep-17-2025  
NOT FOR  
CONSTRUCTION USE

DRAWING # 00

TYPE:

PATIENT ROOM

QUANTITY:

00


BACK TO BACK

## SYSTEM DETAILS

| SYM | QTY | DESCRIPTION               |
|-----|-----|---------------------------|
| HC  | 4   | HORIZONTAL CHANNEL        |
| O   | 2   | AMICO GAS OUTLET, OXYGEN  |
| A   | 2   | AMICO GAS OUTLET, MED AIR |
| V   | 2   | AMICO GAS OUTLET, VACUUM  |
| E2  | 4   | RECEPTACLE - DUPLEX RED   |
| N2  | 4   | RECEPTACLE - DUPLEX IVORY |
| NC  | 2   | PROVISION - NURSE CALL 3G |
| DA  | 4   | PROVISION - DATA 1G       |

### IMPORTANT NOTES:

- MAINTAIN A MINIMUM SPACING OF 3" C/C BETWEEN LOW VOLTAGE DEVICES, POWER OUTLETS, AND SWITCHES.
- MAINTAIN A MINIMUM SPACING OF 5" C/C BETWEEN GAS OUTLETS.
- NURSE CALL DEVICES MUST MAINTAIN A MINIMUM SPACING OF 6" C/C FROM OTHER SERVICES DUE TO THE SIZE OF THE DEVICE FACE
- STUD SIZES AVAILABLE ON 2 1/2", 3 5/8", 4", 6" AND 8".
- BACK-TO-BACK UNITS REQUIRES 6" STUDS.
- FOR VERTICAL GRAIN DIRECTION LAMINATE, A LAMINATE DIVIDER IS REQUIRED EVERY 47.5" (C/C) OF LAMINATE LENGTH.
- DO NOT PLACE ANY SERVICES WITHIN 3" SPACING FROM THE LAMINATE DIVIDER.

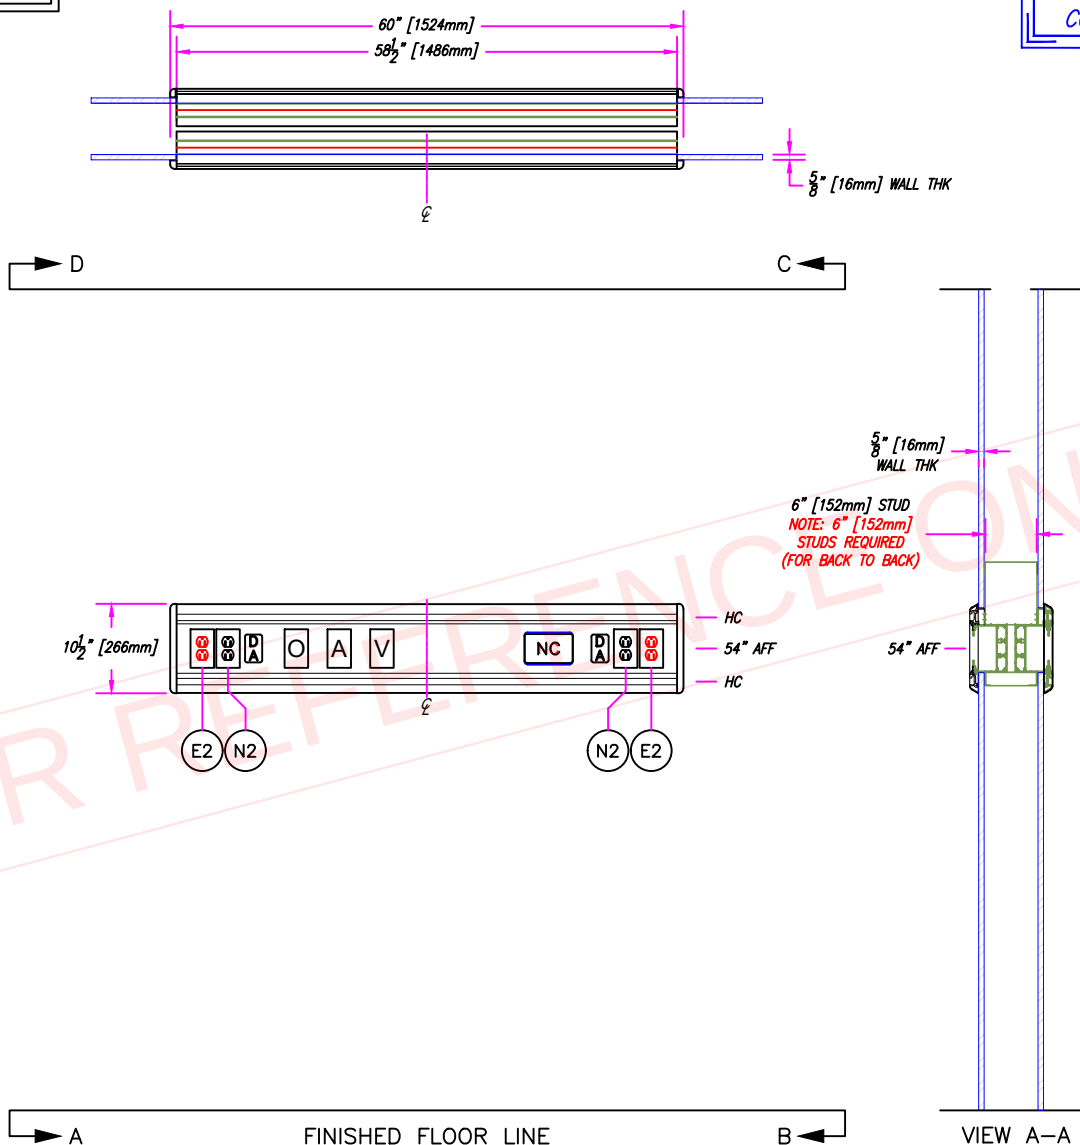

IMPORTANT: PLEASE VERIFY THAT THE ABOVE INFORMATION IS  
CORRECT, AND PROVIDE THE REMAINING DETAILS.

APPROVAL - PRINT AND SIGNATURE

DATE

PHONE NO.

|                        |          |             |               |                       |
|------------------------|----------|-------------|---------------|-----------------------|
| HOSPITAL               | HOSPITAL | NURSE CALL  | MFGR. : TBC   | MODEL No. : TBC       |
| LOCATION               | LOCATION | GAS OUTLETS | MFGR. : AMICO | TYPE CONNECTION : TBC |
| UNIT AS SHOWN - N.T.S. |          | FINISH      | TBC           | CEILING HEIGHT        |
|                        |          |             |               | N/A                   |



85 Fulton Way  
Richmond Hill, Ontario  
L4B 2N4, CANADA  
Toll-Free: 1-877-462-6436(T)  
1-866-440-4986(F)  
Tel: (905) 764-0800  
Fax: (905) 764-0862

QUOTE No.

REV. BY: RJUSAYAN  
PROJECT PM:  
DATE: Sep-17-2025  
REV. NO:

PLEASE SPECIFY (IF NOT SPECIFIED AMICO  
WILL PROVIDE DEFAULTS LISTED BELOW):

STUD SIZE ( 3 5/8" TYP. ): TBC

STUD GAUGE ( #16 TYP. ): TBC

WALL THICKNESS ( 5/8" TYP. ): TBC


# RECESSED MAJESTIC SERIES HORIZONTAL HEADWALL SYSTEM SINGLE TIER (M/N: HW00-01T-P-RXXX)

FOR PRESENTATION  
PURPOSES ONLY  
Sep-17-2025  
NOT FOR  
CONSTRUCTION USE





Install  
Instructions

## BACK TO BACK UNIT DETAIL

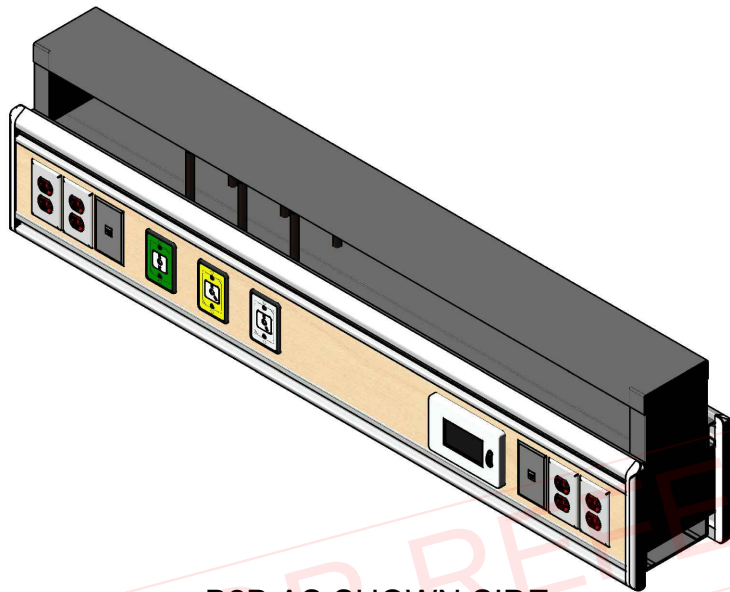

B2B AS SHOWN SIDE

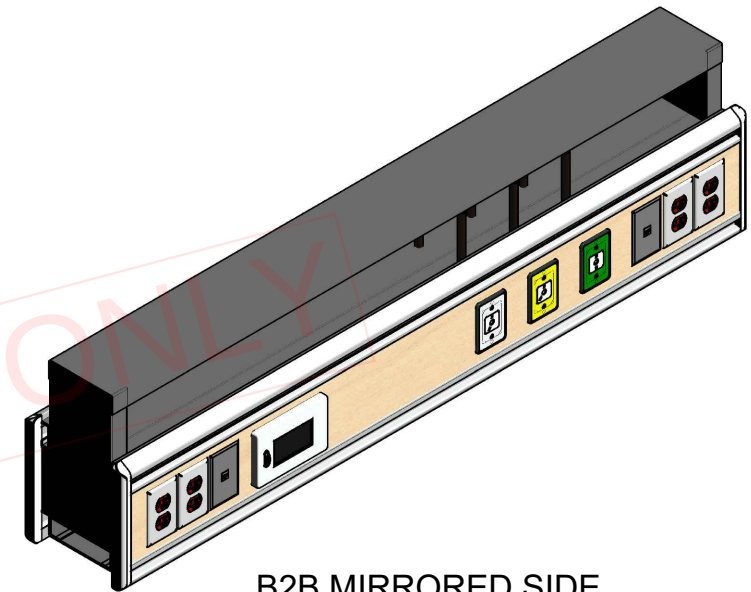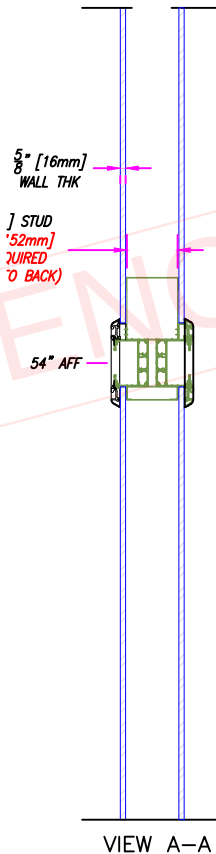

B2B MIRRORED SIDE

IMPORTANT: PLEASE VERIFY THAT THE ABOVE INFORMATION IS  
CORRECT, AND PROVIDE THE REMAINING DETAILS.

APPROVAL - PRINT AND SIGNATURE

DATE

PHONE NO.

|                        |          |             |               |                       |                                                                                                        |                                                                                                                                                               |                   |
|------------------------|----------|-------------|---------------|-----------------------|--------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|
| HOSPITAL               | HOSPITAL | NURSE CALL  | MFGR. : TBC   | MODEL No. : TBC       | <br>www.amico.com | 85 Fulton Way<br>Richmond Hill, Ontario<br>L4B 2N4, CANADA<br>Toll-Free: 1-877-462-6426(T)<br>1-866-440-4986(F)<br>Tel: (905) 764-0800<br>Fax: (905) 764-0862 | QUOTE No.         |
| LOCATION               | LOCATION | GAS OUTLETS | MFGR. : AMICO | TYPE CONNECTION : TBC |                                                                                                        |                                                                                                                                                               | REV. BY: RJUSAYAN |
| UNIT AS SHOWN - N.T.S. |          | FINISH      | TBC           | CEILING HEIGHT        |                                                                                                        |                                                                                                                                                               | PROJECT PM:       |
|                        |          |             |               | N/A                   | DATE: Sep-17-2025                                                                                      |                                                                                                                                                               |                   |
|                        |          |             |               |                       |                                                                                                        |                                                                                                                                                               | REV. NO:          |