

AMICO WILL PROVIDE DEFAULTS LISTED BELOW:

STUD FRAME HEIGHT: 10'
STUD SIZE: TBC
STUD GAUGE: 16Ga
GYP. THICKNESS: 5/8"

NULOOK RECESSED PANELWALL

NO DRYWALL & FRAMELESS
(M/N: FWXXX-ND-GEN-P-RC)

FOR PRESENTATION
PURPOSES ONLY
Sep-18-2025
NOT FOR
CONSTRUCTION USE



TYPE:

DRAWING # 00

PATIENT ROOM

QUANTITY:

00

IF MIRRORED UNITS ARE REQUIRED, THE CUSTOMER MUST INDICATE THE QUANTITY BELOW


QTY MIRRORED: _____

SYSTEM DETAILS



SYM	QTY	DESCRIPTION
O	2	AMICO GAS OUTLET, OXYGEN
A	2	AMICO GAS OUTLET, MED AIR
V	3	AMICO GAS OUTLET, VACUUM
E2	5	RECEPTACLE - DUPLEX RED
N2	4	RECEPTACLE - DUPLEX IVORY
DA	2	PROVISION - DATA 1G
NC	1	PROVISION - NURSE CALL 3G

IMPORTANT NOTES:

- STANDARD AVAILABLE HEIGHTS: 9' AND 10'.
- STANDARD AVAILABLE STUD SPACING: 16" AND 24". STUDS CAN BE ABUTTED TO COMBINE AND INCREASE LENGTH.
- STUD SIZE AVAILABLE: 2 1/2", 3 5/8", 4" AND 6".
- BACK TO BACK SETUP REQUIRES 6" STUD SIZE.
- MAINTAIN A MINIMUM SPACING OF 3" C/C BETWEEN LOW VOLTAGE DEVICES, POWER OUTLETS, AND SWITCHES.
- MAINTAIN A MINIMUM SPACING OF 5" C/C BETWEEN GAS OUTLETS.
- NURSE CALL DEVICES MUST MAINTAIN A MINIMUM SPACING OF 6" C/C FROM OTHER SERVICES DUE TO THE SIZE OF THE DEVICE FACE TOP AND BOTTOM TRACK INCLUDED.

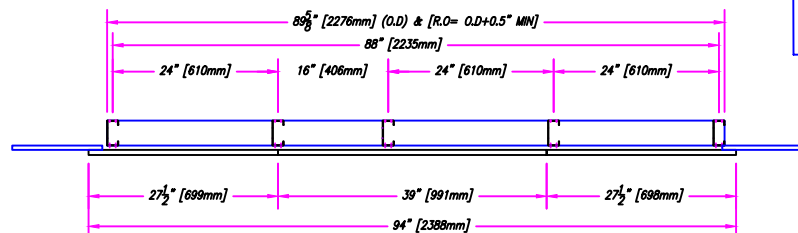

FOR VISUAL PURPOSES ONLY
ACTUAL NUMBER & LOCATION
OF TERMINATION BOXES,
EMT CONDUITS & GAS PIPES TO
BE CONFIRMED DURING PRODUCTION
UNLESS OTHERWISE SPECIFIED

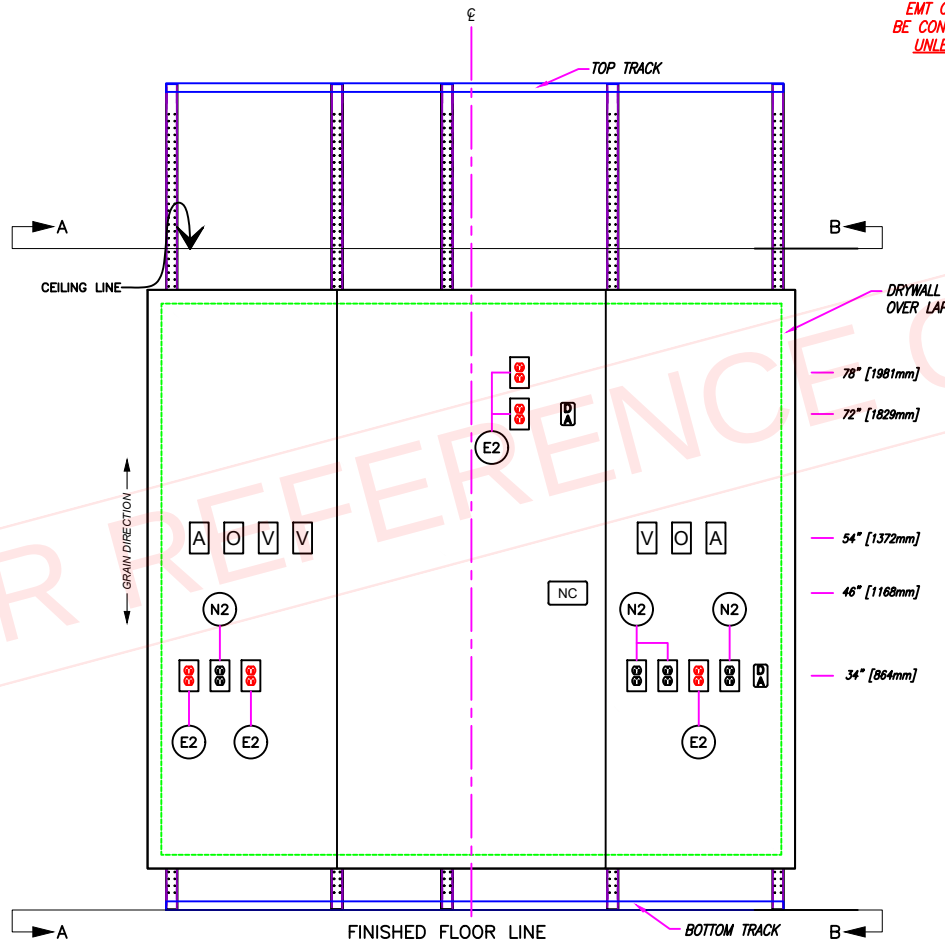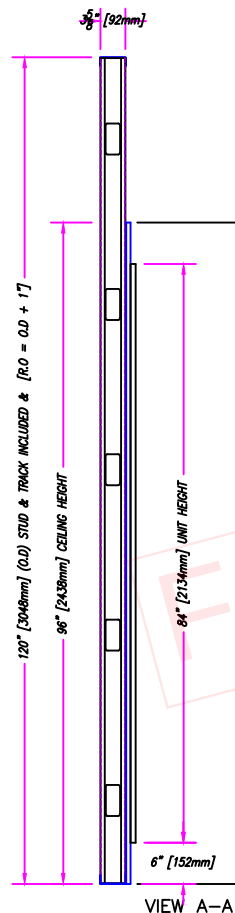

IMPORTANT: PLEASE VERIFY THAT THE ABOVE INFORMATION IS CORRECT, AND PROVIDE THE REMAINING DETAILS.

APPROVAL - PRINT AND SIGNATURE

DATE

PHONE NO.

HOSPITAL	NURSE CALL	MFGR. : TBC	MODEL No. : TBC
LOCATION	GAS OUTLETS	MFGR. : AMICO	TYPE CONNECTION : TBC
UNIT AS SHOWN - N.T.S.	FINISH	TBC	CEILING HEIGHT TBC



85 Fulton Way
Richmond Hill, Ontario
L4B 2N4, CANADA
Toll-Free: 1-877-462-6436(T)
1-866-440-4986(F)
Tel: (905) 764-0800
Fax: (905) 764-0862

QUOTE No.
REV. BY: RJUSAYAN
PROJECT PM:
DATE: Sep-18-2025
REV. NO:

AMICO WILL PROVIDE DEFAULTS LISTED BELOW:

STUD FRAME HEIGHT: 10'
STUD SIZE: 6" MIN.
STUD GAUGE: 16Ga
GYP. THICKNESS: 5/8"

NULOOK RECESSED PANELWALL

NO DRYWALL & FRAMELESS
(M/N: FWXXX-ND-GEN-P-BB)

FOR PRESENTATION
PURPOSES ONLY
Sep-18-2025
NOT FOR
CONSTRUCTION USE



Install
Instructions

TYPE:

DRAWING # 00

PATIENT ROOM

QUANTITY:

00


BACK TO BACK

SYSTEM DETAILS



SYM	QTY	DESCRIPTION
O	4	AMICO GAS OUTLET, OXYGEN
A	4	AMICO GAS OUTLET, MED AIR
V	6	AMICO GAS OUTLET, VACUUM
E2	10	RECEPTACLE - DUPLEX RED
N2	8	RECEPTACLE - DUPLEX IVORY
DA	4	PROVISION - DATA 1G
NC	2	PROVISION - NURSE CALL 3G

IMPORTANT NOTES:

- STANDARD AVAILABLE HEIGHTS: 9' AND 10'.
- STANDARD AVAILABLE STUD SPACING: 16" AND 24". STUDS CAN BE ABUTTED TO COMBINE AND INCREASE LENGTH.
- STUD SIZE AVAILABLE: 2 1/2", 3 5/8", 4" AND 6".
- BACK TO BACK SETUP REQUIRES 6" STUD SIZE.
- MAINTAIN A MINIMUM SPACING OF 3" C/C BETWEEN LOW VOLTAGE DEVICES, POWER OUTLETS, AND SWITCHES.
- MAINTAIN A MINIMUM SPACING OF 5" C/C BETWEEN GAS OUTLETS.
- NURSE CALL DEVICES MUST MAINTAIN A MINIMUM SPACING OF 6" C/C FROM OTHER SERVICES DUE TO THE SIZE OF THE DEVICE FACE TOP AND BOTTOM TRACK INCLUDED.

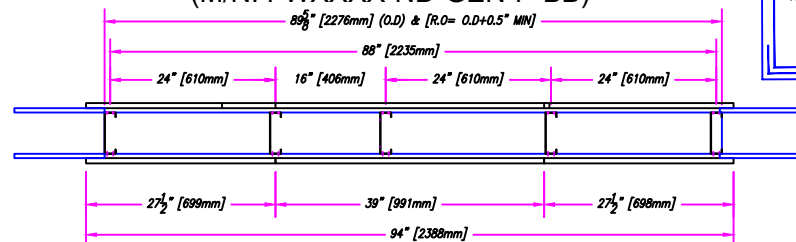

FOR VISUAL PURPOSES ONLY
ACTUAL NUMBER & LOCATION
OF TERMINATION BOXES,
EMT CONDUITS & GAS PIPES TO
BE CONFIRMED DURING PRODUCTION
UNLESS OTHERWISE SPECIFIED

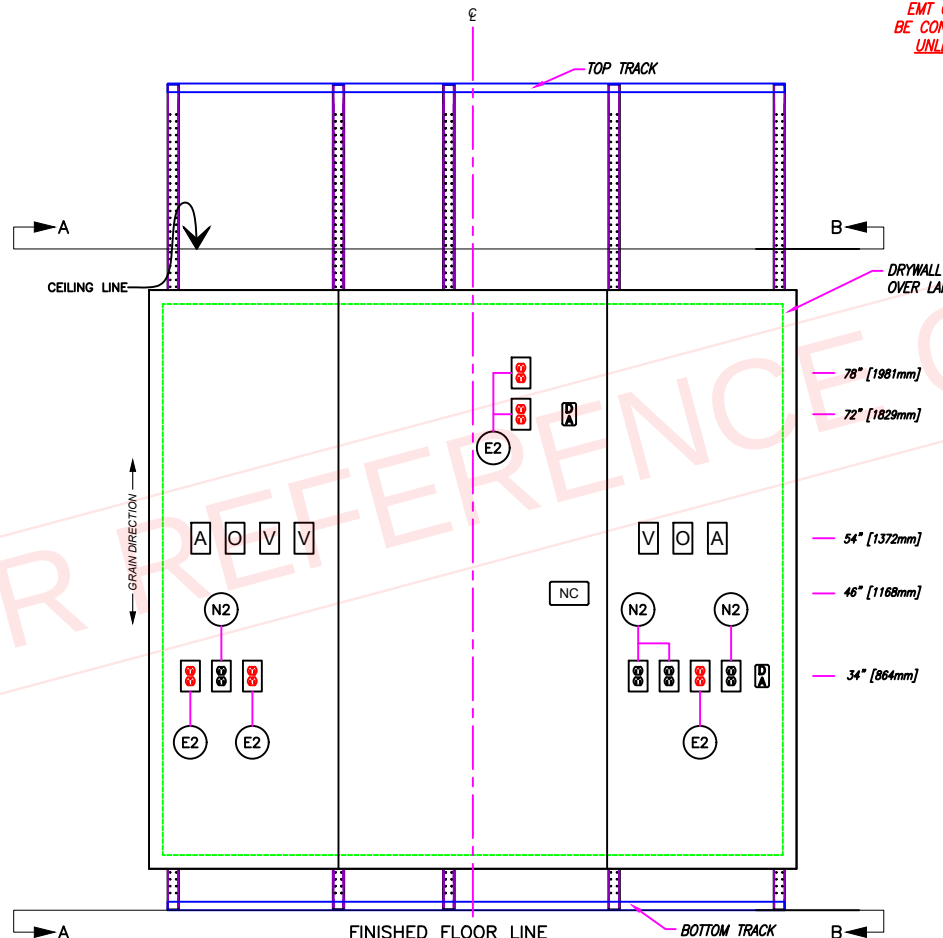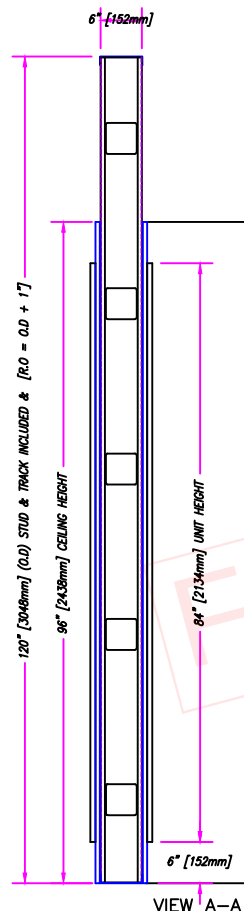

IMPORTANT: PLEASE VERIFY THAT THE ABOVE INFORMATION IS
CORRECT, AND PROVIDE THE REMAINING DETAILS.

APPROVAL - PRINT AND SIGNATURE

DATE

PHONE NO.

HOSPITAL	HOSPITAL	NURSE CALL	MFGR. : TBC	MODEL No. : TBC
LOCATION	LOCATION	GAS OUTLETS	MFGR. : AMICO	TYPE CONNECTION : TBC
	UNIT AS SHOWN - N.T.S.	FINISH	TBC	CEILING HEIGHT TBC



85 Fulton Way
Richmond Hill, Ontario
L4B 2N4, CANADA
Toll-Free: 1-877-462-6436(T)
1-866-440-4986(F)
Tel: (905) 764-0800
Fax: (905) 764-0862

QUOTE No.

REV. BY: RJUSAYAN
PROJECT PM:
DATE: Sep-18-2025
REV. NO:

AMICO WILL PROVIDE DEFAULTS LISTED BELOW:

STUD FRAME HEIGHT: 10'
STUD SIZE: 6" MIN.
STUD GAUGE: 16Ga
GYP. THICKNESS: 5/8"

NULOOK RECESSED PANELWALL

NO DRYWALL & FRAMELESS
(M/N: FWXXXX-ND-GEN-P-BB)


FOR PRESENTATION
PURPOSES ONLY
Sep-18-2025
NOT FOR
CONSTRUCTION USE




BACK TO BACK UNIT DETAIL



B2B AS SHOWN SIDE

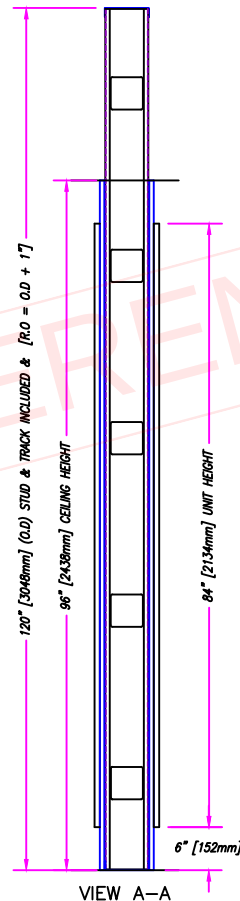

VIEW A-A

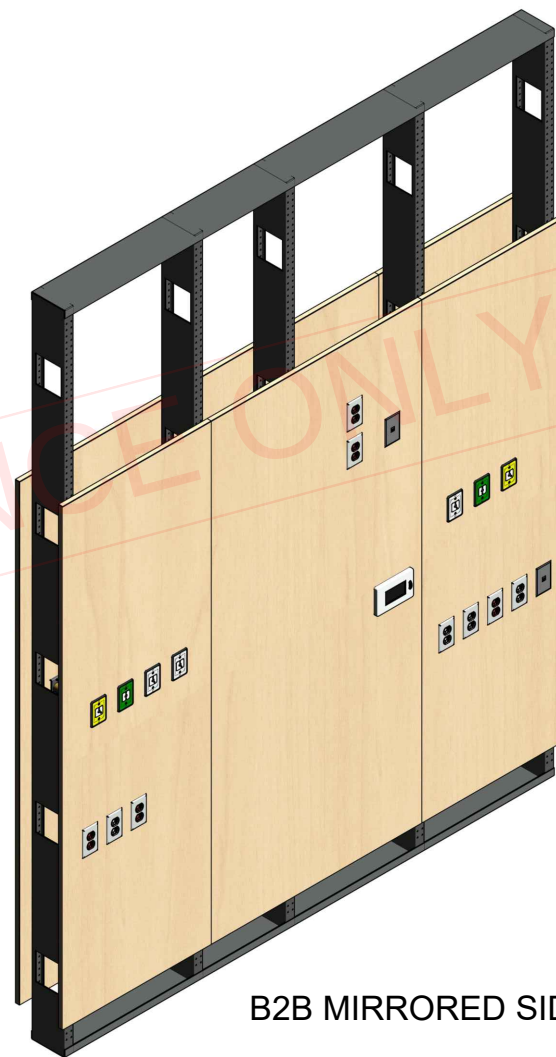

B2B MIRRORED SIDE

IMPORTANT: PLEASE VERIFY THAT THE ABOVE INFORMATION IS
CORRECT, AND PROVIDE THE REMAINING DETAILS.

APPROVAL - PRINT AND SIGNATURE

DATE

PHONE NO.

HOSPITAL	HOSPITAL	NURSE CALL	MFGR. : TBC	MODEL No. : TBC
LOCATION	LOCATION	GAS OUTLETS	MFGR. : AMICO	TYPE CONNECTION : TBC
	UNIT AS SHOWN - N.T.S.	FINISH	TBC	CEILING HEIGHT TBC



85 Fulton Way
Richmond Hill, Ontario
L4B 2N4, CANADA
Toll-Free: 1-877-462-6436(T)
1-866-440-4986(F)
Tel: (905) 764-0800
Fax: (905) 764-0862

QUOTE No.
REV. BY: RJUSAYAN
PROJECT PM:
DATE: Sep-18-2025
REV. NO: