

**AMICO WILL PROVIDE DEFAULTS LISTED BELOW:**


STUD FRAME HEIGHT: 10'  
 STUD SIZE: TBC  
 STUD GAUGE: 16Ga  
 GYP. THICKNESS: 5/8"

# NULOOK SKELETON SYSTEM

(M/N: FWXXSK-YY-GEN-P)



*FOR PRESENTATION PURPOSES ONLY*  
 Sep-18-2025  
*NOT FOR CONSTRUCTION USE*



## DRAWING # 00

TYPE:	QUANTITY:
PATIENT ROOM	00

IF MIRRORED UNITS ARE REQUIRED, THE CUSTOMER MUST INDICATE THE QUANTITY BELOW  
 QTY MIRRORED: \_\_\_\_\_


### SYSTEM DETAILS

SYM	QTY	DESCRIPTION
O	3	AMICO GAS OUTLET, OXYGEN
A	3	AMICO GAS OUTLET, MED AIR
V	3	AMICO GAS OUTLET, VACUUM
E2	6	RECEPTACLE - DUPLEX RED
N2	3	RECEPTACLE - DUPLEX IVORY
DA	1	PROVISION - DATA 1G

#### IMPORTANT NOTES:

- STANDARD AVAILABLE HEIGHTS: 9' AND 10'.
- STANDARD AVAILABLE STUD SPACING: 16" AND 24". STUDS CAN BE ABUTTED TO COMBINE AND INCREASE LENGTH.
- STUD SIZE AVAILABLE: 2 1/2", 3 5/8", 4" AND 6".
- BACK TO BACK SETUP REQUIRES 6" STUD SIZE.
- MAINTAIN A MINIMUM SPACING OF 3" C/C BETWEEN LOW VOLTAGE DEVICES, POWER OUTLETS, AND SWITCHES.
- MAINTAIN A MINIMUM SPACING OF 5" C/C BETWEEN GAS OUTLETS.
- NURSE CALL DEVICES MUST MAINTAIN A MINIMUM SPACING OF 6" C/C FROM OTHER SERVICES DUE TO THE SIZE OF THE DEVICE FACE
- TOP AND BOTTOM TRACK INCLUDED.

*FOR VISUAL PURPOSES ONLY*  
 ACTUAL NUMBER & LOCATION OF TERMINATION BOXES, EMT CONDUITS & GAS PIPES TO BE CONFIRMED DURING PRODUCTION UNLESS OTHERWISE SPECIFIED

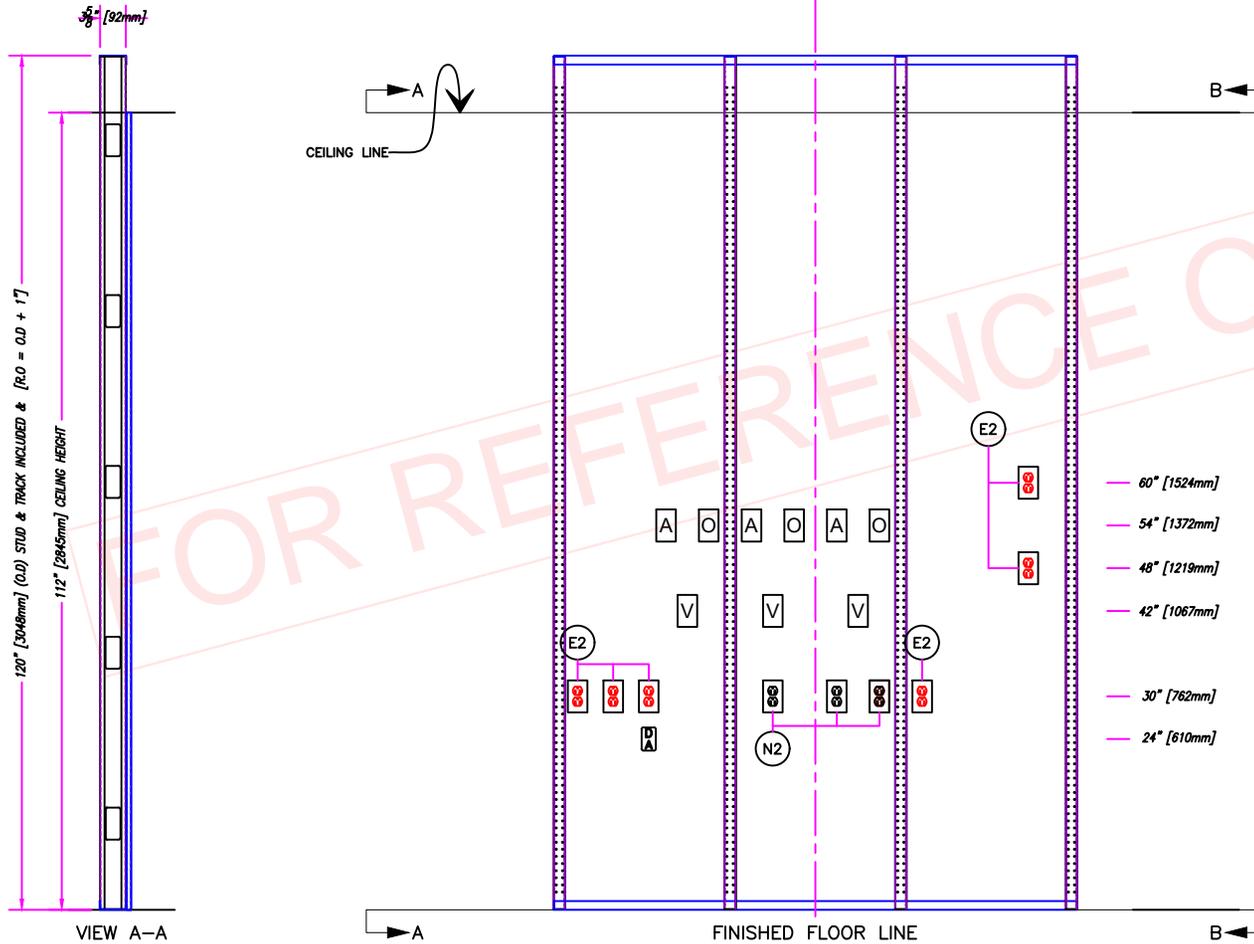

IMPORTANT: PLEASE VERIFY THAT THE ABOVE INFORMATION IS CORRECT, AND PROVIDE THE REMAINING DETAILS.

APPROVAL - PRINT AND SIGNATURE \_\_\_\_\_

DATE \_\_\_\_\_

PHONE NO. \_\_\_\_\_

HOSPITAL	HOSPITAL	NURSE CALL	MFGR. : TBC	MODEL No. : TBC
LOCATION	LOCATION	GAS OUTLETS	MFGR. : AMICO	TYPE CONNECTION : TBC
UNIT AS SHOWN - N.T.S.		FINISH	TBC	CEILING HEIGHT TBC

85 Fulton Way  
 Richmond Hill, Ontario  
 L4B 2N4, CANADA  
 Toll-Free: 1-877-462-6436(T)  
 1-866-440-4986(F)  
 Tel: (905) 764-0800  
 Fax: (905) 764-0862  
 www.amico.com

QUOTE No.
REV. BY: RJUSAYAN
PROJECT PM:
DATE: Sep-18-2025
REV. NO:

**AMICO WILL PROVIDE DEFAULTS LISTED BELOW:**


STUD FRAME HEIGHT: 10'  
 STUD SIZE: 6" MIN.  
 STUD GAUGE: 16Ga  
 GYP. THICKNESS: 5/8"

# NULOOK SKELETON SYSTEM


(M/N: FWXXSK-YY-GEN-P)



**FOR PRESENTATION PURPOSES ONLY**  
 Sep-18-2025  
**NOT FOR CONSTRUCTION USE**



**FOR VISUAL PURPOSES ONLY**  
 ACTUAL NUMBER & LOCATION OF TERMINATION BOXES, EMT CONDUITS & GAS PIPES TO BE CONFIRMED DURING PRODUCTION UNLESS OTHERWISE SPECIFIED

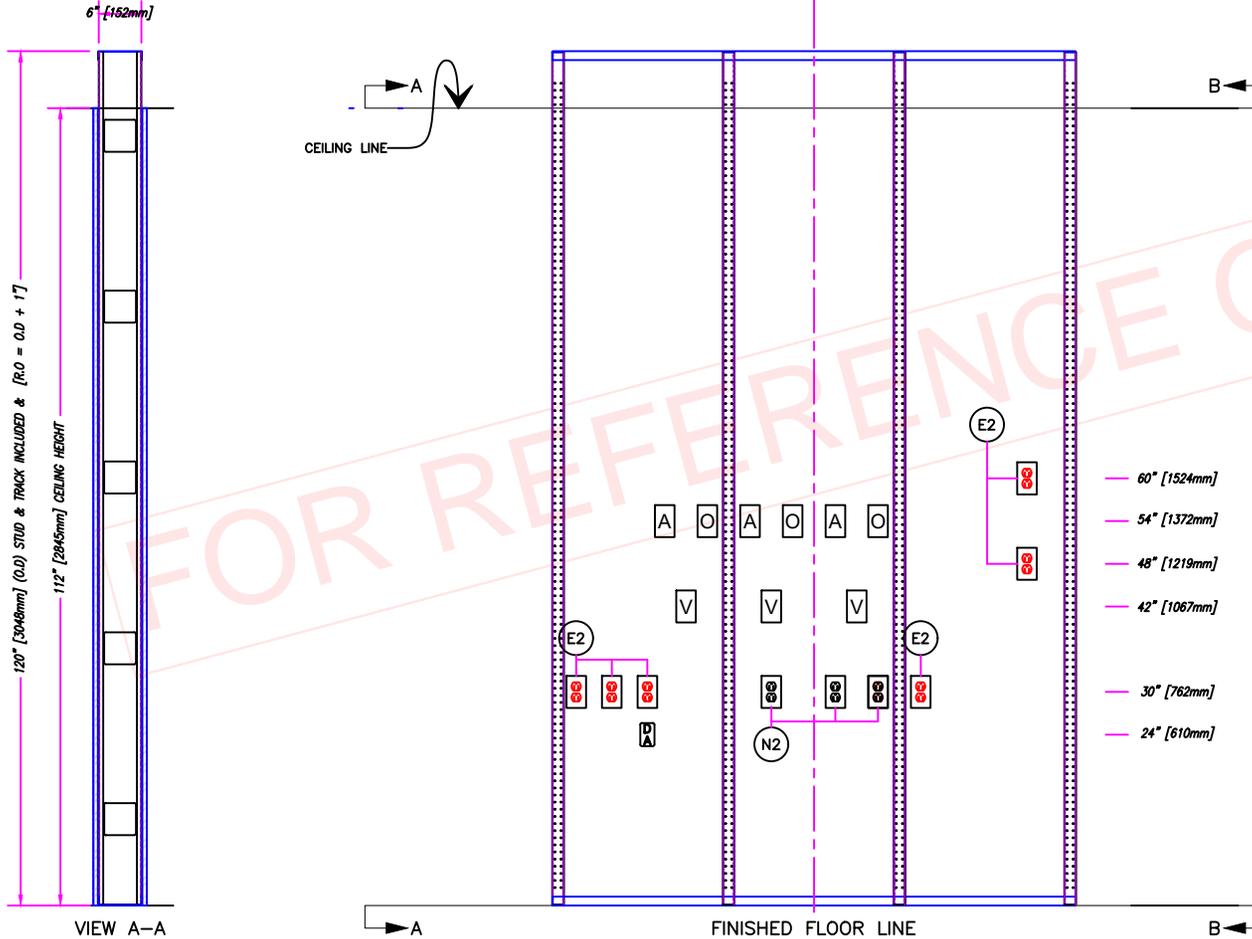

## DRAWING # 00

TYPE:	QUANTITY:
PATIENT ROOM	00

## BACK TO BACK

### SYSTEM DETAILS

SYM	QTY	DESCRIPTION
O	6	AMICO GAS OUTLET, OXYGEN
A	6	AMICO GAS OUTLET, MED AIR
V	6	AMICO GAS OUTLET, VACUUM
E2	12	RECEPTACLE - DUPLEX RED
N2	6	RECEPTACLE - DUPLEX IVORY
DA	2	PROVISION - DATA 1G

#### IMPORTANT NOTES:

- STANDARD AVAILABLE HEIGHTS: 9' AND 10'.
- STANDARD AVAILABLE STUD SPACING: 16" AND 24". STUDS CAN BE ABUTTED TO COMBINE AND INCREASE LENGTH.
- STUD SIZE AVAILABLE: 2 1/2", 3 5/8", 4" AND 6".
- BACK TO BACK SETUP REQUIRES 6" STUD SIZE.
- MAINTAIN A MINIMUM SPACING OF 3" C/C BETWEEN LOW VOLTAGE DEVICES, POWER OUTLETS, AND SWITCHES.
- MAINTAIN A MINIMUM SPACING OF 5" C/C BETWEEN GAS OUTLETS.
- NURSE CALL DEVICES MUST MAINTAIN A MINIMUM SPACING OF 6" C/C FROM OTHER SERVICES DUE TO THE SIZE OF THE DEVICE FACE
- TOP AND BOTTOM TRACK INCLUDED.

IMPORTANT: PLEASE VERIFY THAT THE ABOVE INFORMATION IS CORRECT, AND PROVIDE THE REMAINING DETAILS.

APPROVAL - PRINT AND SIGNATURE

DATE

PHONE NO.

HOSPITAL	HOSPITAL	NURSE CALL	MFGR. : TBC	MODEL No. : TBC
LOCATION	LOCATION	GAS OUTLETS	MFGR. : AMICO	TYPE CONNECTION : TBC
UNIT AS SHOWN - N.T.S.		FINISH	TBC	CEILING HEIGHT TBC



85 Fulton Way  
 Richmond Hill, Ontario  
 L4B 2N4, CANADA  
 Toll-Free: 1-877-482-6436(T)  
 1-866-440-4986(F)  
 Tel: (905) 764-0800  
 Fax: (905) 764-0862

QUOTE No.
REV. BY: RJUSAYAN
PROJECT PM:
DATE: Sep-18-2025
REV. NO:

**AMICO WILL PROVIDE DEFAULTS LISTED BELOW:**

STUD FRAME HEIGHT: 10'  
 STUD SIZE: 6" MIN.  
 STUD GAUGE: 16Ga  
 GYP. THICKNESS: 5/8"


# NULOOK SKELETON SYSTEM

(M/N: FWXXSK-YY-GEN-P)





FOR PRESENTATION  
 PURPOSES ONLY  
 Sep-18-2025  
 NOT FOR  
 CONSTRUCTION USE

## BACK TO BACK UNIT DETAIL

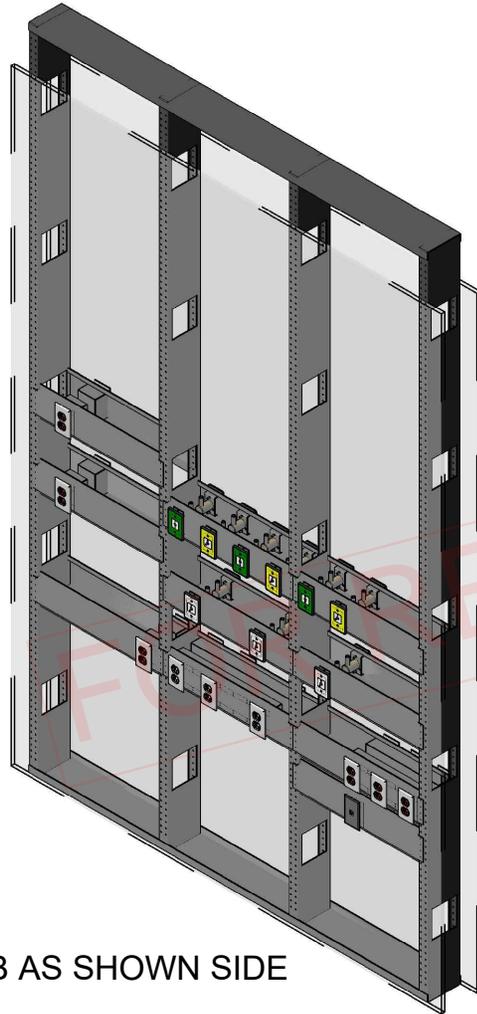

B2B AS SHOWN SIDE

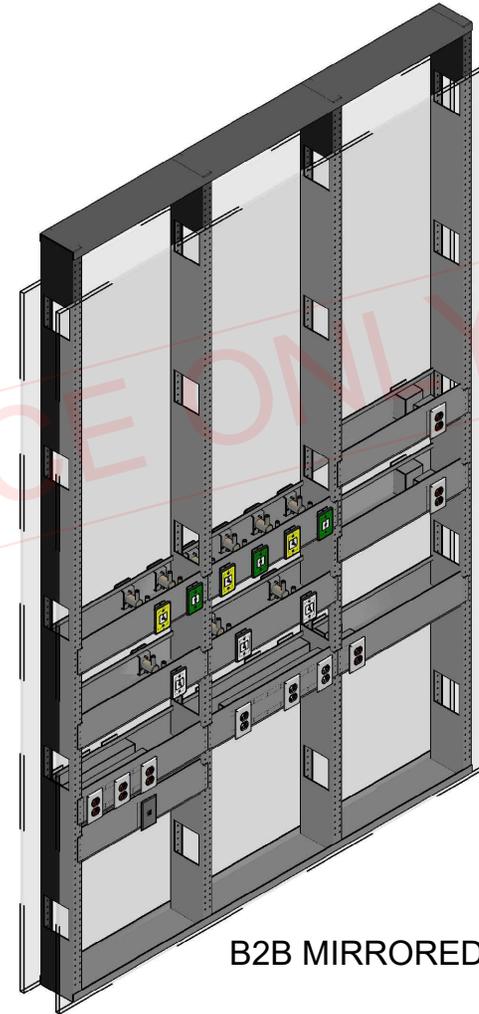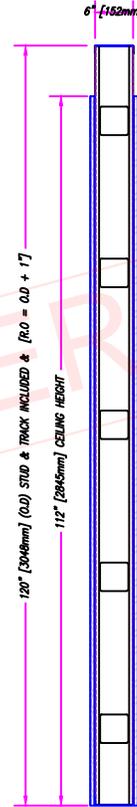

B2B MIRRORED SIDE

IMPORTANT: PLEASE VERIFY THAT THE ABOVE INFORMATION IS CORRECT, AND PROVIDE THE REMAINING DETAILS.

APPROVAL - PRINT AND SIGNATURE

DATE

PHONE NO.

HOSPITAL	HOSPITAL	NURSE CALL	MFGR. : TBC	MODEL No. : TBC
LOCATION	LOCATION	GAS OUTLETS	MFGR. : AMICO	TYPE CONNECTION : TBC
	UNIT AS SHOWN - N.T.S.	FINISH	TBC	CEILING HEIGHT TBC



85 Fulton Way  
 Richmond Hill, Ontario  
 L4B 2N4, CANADA  
 Toll-Free: 1-877-482-6436(T)  
 1-866-440-4986(F)  
 Tel: (905) 764-0800  
 Fax: (905) 764-0862

QUOTE No.
REV. BY: RJUSAYAN
PROJECT PM:
DATE: Sep-18-2025
REV. NO: