

Computer Mounting



Hawk™

Laptop Workstation

LTH2 - Laptop Workstation

AHM-LTH2-05



LTH1 - Open Access Laptop Workstation

AHM-LTH1-05



Common Features:

- Easily adjusts from sitting to standing in one smooth motion
- Reclaim floor space and reuse hardware from bulky COWs (Computer On Wheels)
- Accommodates any size laptop
- 17" (43.2 cm) Vertical Adjustment Range can accommodate users of any height
- 180° side to side motion range
- Counterbalanced to provide ease of movement
- Anti-drift lock easily accessible, designed for heavy-handed typers
- Secure locking bars prevent theft
- 360° access to all ports, power buttons and CD-ROM
- Unique polymer base designed to dissipate heat
- Full range of motion on LCD screen tilting even when locked down
- Built-in handle allows quick maneuvering
- Integrated cable management and support accessories available for AC power bricks, mouse holders and barcode scanners
- Custom color options available
- 5 year warranty

Features:

LTH2 – Laptop Workstation

- Combines flexibility of laptop computing with the ergonomics of a full desktop
- Exclusive 8" (20.3 cm) pull out keyboard tray and L/R sliding mouse tray for better comfort
- Additional work surface adds versatility
- Easy to clean keyboard and work surface

LTH1 – Open Access Laptop Workstation

- Open access ideal when no peripheral input devices are needed.
- Built-in L/R sliding mouse tray
- Can be easily upgraded to LTH2 in the field

Product Benefits

Theft Prevention



- Support bars enable secure locking of any size laptop
- Locking bars can be secured down with tie wraps, pad-locks or other mechanical locks
- Stainless steel bars are easily cleaned
- Designed to allow nearly full closure of LCD screen, ideal for privacy or eliminating glare

Accessibility




- Both LTH1 and LTH2 have 360° access for USB, network, power, printer or any peripheral device
- Both workstations are designed for access to power buttons or special function keys
- Front access allows biometric scanning or CD drive use

Ergonomics



- Accommodates full size QWERTY keyboards, commercial or medical grade
- 8" (203 mm) pull out keyboard tray designed to relieve unnecessary strain
- Negative tilt keyboard tray designed for standing positions
- Full LCD tilt reduces glare and makes viewing easier
- Counter balanced arm requires minimal effort to adjust the height
- Sliding L/R mouse tray accommodates even southpaws

Ventilation Base

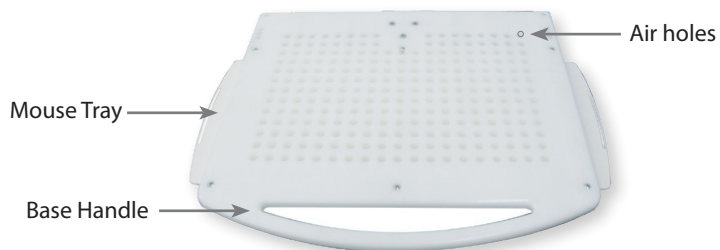

- Base allows air to penetrate through the bottom, creating ventilation for the laptop
- Plastic finish allows for easy sterilization and is resistant to heat
- Durable, light weight and has no sharp edges
- Fully functional for left and right handed users

Mounting Options

Anesthesia Mount



- Ideal for patient documentation on anesthesia machines
- Provides optimal ergonomic placement
- Modular design allows for easy removal and cleaning of parts
- Compatible with all major manufacturers

Monitor Channel



- Channel mounts directly to the wall
- Laptop holder can easily be mounted or removed from channel
- Easily height-adjusted along the channel to match the user's preference

Counter-Top Mount



- Secure and hassle free mounting onto counter-tops
- Ideal for mounting in critical areas where space is limited
- Can be vertically adjusted along the channel to suit the height preference of the facility worker

Headwall Mount



- Laptop holder is capable of hassle free direct mounting to the Amico vertical headwall
- Arm mounts directly to the existing rail on the vertical headwall and can be re-positioned anywhere along the length of the headwall
- Ergonomically designed to mount near patient beds

* Can be purchased with laptop and keyboard tray or with laptop tray only. Options compatible with both AHM & SSM.

Computer Mounting Accessories


Power Bar



- Hospital grade, 4 power outlets
- 120 VAC, 60Hz

Part Number: PWRBAR4-MON

Large Storage Basket

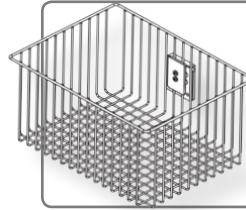

- 13"x 9"x 7" white wire basket (33 cm x 22.9 cm x 17.8 cm)
- Can be sterilized

Part Number: 130907-MON-BB

Cord Hooks



- Manage cables, cords and other hanging wires
- Attach to the bottom of any monitor arm

Part Number: CRDHLD

Power Holder



- Holds most power adapters for PCs, patient monitors and LCDs

Part Number: PWRHLD-MON

Monitor Channel



- Standard wall channel 19" (48.3 cm)
- Seismic options are available and custom lengths are welcome

Part Number: MRS-S019


Channel Covers



- Easy way to hide wires
- Available in patterns and colors to match any decor

Call for part number.


Small Storage Basket

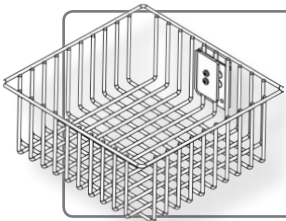

- 10"x 10"x 4" white wire basket (25.4 cm x 25.4 cm x 10.2 cm)
- Can be sterilized

Part Number: 101004-MON-BB


Writing Surface



*Writing Surface/Keyboard Tray available in custom colors.




Medium Storage Basket

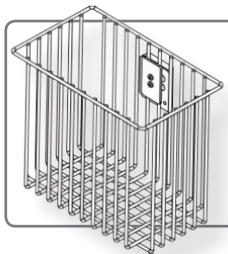

- 10" x 6" x 9" white wire basket (25.4 cm x 15.2 cm x 22.9 cm)
- Can be sterilized

Part Number: 100609-MON-BB

Distributed By:



Please visit www.amico.com for all technical specifications, installation instructions, detailed AutoCAD drawings and more Mounting Solutions.

