


Digital Multifunction Keypad

LightMaster Series

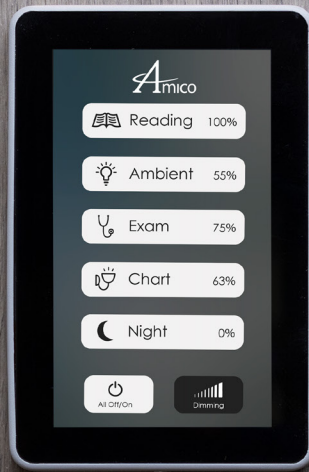

Ready to modernize your patient rooms controls? Amico is excited to introduce the newest generation in our LightMaster Control System, the **Digital Multifunction Keypad**. With the same functionality and intuitive system as previous generations this keypad comes standard with a capacitive touch backlit LCD display allowing clinicians and patients alike to better identify lighting functions. We've brought the familiarity of your smart phone into the healthcare space, with an All ON/All OFF home button and slide-to-dim functions you'll feel right at home with the Digital Keypad.

Designed for Healthcare

Engineered to maximize clinical workflow efficiencies and increase patient satisfaction, our Digital Keypad and control system controls up to five different lighting functions on one single-gang keypad. The fully sealed and gasketed faceplate allows for ease of cleaning and infection control freeing up more time for clinicians to focus on what matters.

Performance & Functionality

- 4.3" IPS backlit LCD display
- Controls up to five light functions in one room
- 0 - 10V dimming capability for lighting functions
- Low voltage for patient safety
- Compatible with all nurse call products



Digital Multifunction Keypad



Customizable

Enhance patient comfort and further clinical efficiencies with the use of custom icons and text to differentiate between lighting functions.



User-Friendly

The highly intuitive and user-friendly control system allows for effortless navigation and control over lighting functions, even in those moments when clinicians have multiple pairs of latex gloves on.



Pillow Speaker Integration

The **Digital Keypad** can integrate with any nurse call and pillow speaker system to provide the patient full control of lighting functions from the comfort of their bed.

Technical Specifications

Input Voltage

120 - 277 Volts, 50/60Hz

Output Voltage

120 - 277 Volts, 50/60Hz

Maximum Load

2.5 amps Resistive, 1.8 amps Ballast at 120 Volts,
0.975 amps Resistive, 1.0 amp Ballast at 277 Volts

Low Voltage Circuit

12VDC, 300mA

Operating Temperature

32 - 176°F / 0 - 80°C

Keypad Dimensions

4.64" (L) x 3.03" (W), fits seamlessly in a single-gang electrical box

Dimming Options

0 - 10 V dimming capability for all lighting functions

Additional Information

Warranty: 5-year standard

UL listed

Powered by Class 2 power supply



Browse our complete portfolio
of lighting solutions today!
www.amico.com/lights

Contact us for
More Information

EMAIL US