

# Linea LED Light

A Simplistic Design for Complex Environments

Amico



The **Linea LED** provides simplicity to the patient room without sacrificing performance or functionality. Patients and clinicians both benefit from the sophisticated linear design that eliminates clutter and offers a warm, home-like comfort to the patient room. To ensure an optimal healing environment, the Linea delivers soft ambient and reading lights to support patient mood and recovery, while high-quality examination functions maximize clinical performance.

## Design Flexibility

Customize your Linea lights to create a unique and innovative lighting design for hospitals. The standard reading, ambient, and exam features can be customized to meet the specific needs of the hospital setting.

## Performance & Functionality:

- CCT 3500K, 4000K & CRI 80 - 90
- Flush, one-piece continuous lens system
- Narrow aperture of 3.88 inches
- 0-10V Dimming & DALI options
- Reading, ambient, and exam functionalities
- Hospital-grade materials and finishes



Total Pair  
**12,500**  
LMS


Total Pair  
**160**  
WATTS

# Linea Series LED



## Glare-free Comfort

The frosted acrylic lens offers clean, glare-free lighting for an improved sense of well-being and comfort.

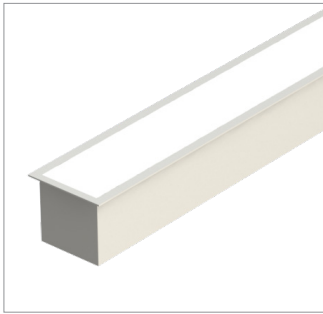

## Seamless Lens System

The flush, one-piece continuous lens system provides a seamless design with no visible gaps or breaks to elevate the hospital room aesthetic.



## Pillow Speaker Integration

The Linea can integrate with any nurse call and pillow speaker system to provide the patient full control of lighting functions from the comfort of their bed.

# Technical Specifications

## Lens

One-piece continuous lens system, fully enclosed with frosted acrylic diffuser

## Standard Lumen Outputs

Reading: 450 lms

Ambient: 2,600 lms

Exam: 3,200 lms

Total: 6,250 lms

Total Pair: 12,500 lms

## Color Temperature & CRI

3500K, 4000K. 80+ or 90+ CRI

Contact factory for additional options

## Voltage

Universal 120-277 VAC

## Run Length

4ft length

## Mounting

Flange Mount & Grid Mount

## Dimming Options

Standard 5% Dimming

DALI Options Available

## Additional Information

Warranty: 5-year standard

Certified to UL standards by ETL.

Conforms to CSA standards as per ETL testing.

## Durability:

- Marine grade aluminum extrusion
- Hospital-grade materials and finishes
- 50,000 hours of LED life

