


Solar Series - MRI

4' x 8' RGB Slim

LED Illuminated Image Wall Fixture

MRI Compatible

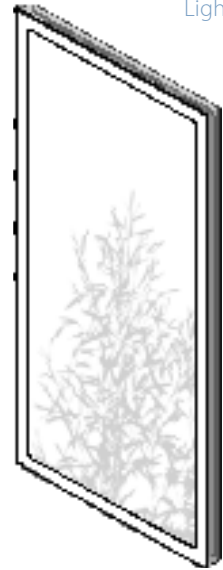

Product Description

The LED Illuminated Wall Fixture is designed for MRI suite applications. It is a non-ferrous assembly which can be mounted within the MRI room. It is pre-engineered with easy installation textured lenses and can have applied artwork image graphics. Contains no on-board electronics therefore will not interfere with MRI imaging. Certified to meet MRI vendor EMI requirements. MRI applications require EMI free emissions for specific frequency bands. All drive circuitry employs linear regulation and no pulse width modulation (PWM*).

Mechanical

	Typical	Units
Installation	Direct Wall Attachment Tabs	-
Dimensions (Fixture)	90 x 48 x 2.75	inches
Dimensions (Trim)	90 x 48	inches
Fixture Weight	<100	lbs

Properties

Lens	Uniform LED Light Diffusing Polymer	
Housing	Wood Frame Construction	
Trim	Laminated	

Electrical

	Minimum	Typical	Maximum	Units
Input Voltage	-	12	-	Vdc
Input Current	-	12.5	-	A
Input Power	-	150	-	W

Compliance

	Minimum	Typical	Maximum	Units
IP	25	-	-	Dry Location
Regulatory Compliance	-	Listed	-	UL 8750
RoHS	-	Pending	-	2011/65/EU

Environmental

	Minimum	Typical	Maximum	Units
Storage Temperature	-40	25	85	C
Operating Temperature	-20	25	35	C
Humidity	5	-	95	%
Lifespan	50000	-	-	Hours
Warranty	3	-	-	Years

Ordering Information

Part Number

1-07-000466: Left Blossom
 1-07-000467: Right Blossom
 1-07-000468: Left Bamboo
 1-07-000469: Right Bamboo
 1-07-000470: Left Custom
 1-07-000471: Right Custom
 3-07-000133: Wall Box Frame

Photometric Data per RGB LED Light Strip (16 per Wall Fixture)

	Minimum	Typical	Maximum	Units
Luminous Intensity (Red)/LED	400	-	-	mcd
Luminous Intensity (Green)/LED	900	-	-	mcd
Luminous Intensity (Blue)/LED	300	-	-	mcd
Wavelength (Red)	-	620	-	nm
Wavelength (Green)	-	520	-	nm
Wavelength (Blue)	-	460	-	nm
Viewing Angle	-	120	-	deg

Installation

A RF Filter is required for proper operation in the MRI suite

A Power Supply is required for proper operation in the MRI suite

*PWM is known to cause image artifacts, audible noise and light flicker

**For informational purposes only. Content subject to change.*

Amico Lights Corporation | 122-B East Beaver Creek Road, Richmond Hill, ON L4B 1G6, Canada | www.amico.com
 Toll Free Tel: 1.877.462.6426 | Toll Free Fax: 1.866.440.4986 | Tel: 905.764.0800 | Fax: 905.764.0862

ALT-SP-MRI-LED-IMAGE-WALL-4X8-RGB-SLIM 08.02.2024